







Successive Tare Programming for CK-Series Scales

1. Make sure that the scale is OFF and then turn the scale ON.
2. Press the  key at any time during the Weight Display's count-up self-test.
3. The displays will then show:





4. Press , , , , and then .
5. The displays should look like this:





6. Press the  key (Speed Key 4) until the displays show:



7. Press the  key. Now use the  key (Speed Key 4) to turn Successive Tare On or Off. The screen looks like this (default is shown):



- a. on = You can change the tare at any point; you can progressively increase or decrease the tare without having to clear it first.
 - b. oFF = You can only set one tare at a time and you must clear the tare before you can change it.
8. Press  and then the  key and the display will go to the Initial State (all zeroes.)

If further problems persist, please contact the Atron Systems Service Department at 973-227-8882.