


PC-100 Quick Calibrate Instructions

1. Make sure that the scale is plugged into a proper outlet, the platter is properly seated, there is nothing on the platter, and that the *Power Switch* is **OFF**.
2. Locate the *CAL Switch* which is under the platter on the front left side. If necessary, remove the *CAL Plate* to expose the *CAL Switch*.

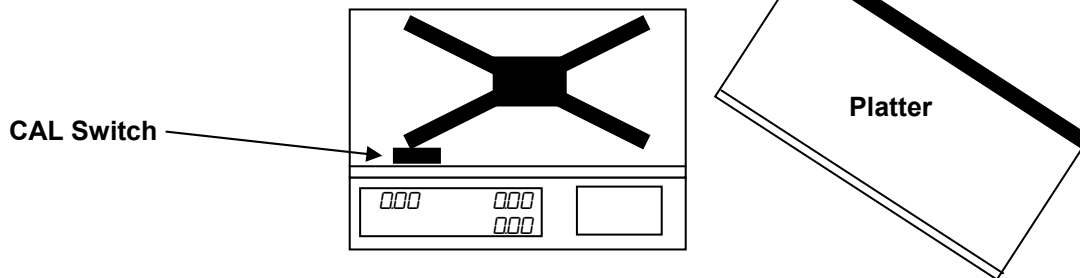

3. Press and hold down the *CAL Switch* as you place the *Power Switch* in the **ON** position.
4. The displays will read: *SPAN SET*.
5. Press and then the display will read: *ZERO*.
6. With nothing on the platter, press the key. The display will now read: *FULL*.
7. You can calibrate with 60 lb (30 kg) or 30 lb (15 kg). You may use kg weights if the scale is set up for kg weighing.

a. Place 60 lb on the platter and then press the key. The displays will show: **OR** *rEAd*, then *End*, and finally *SELF tEST*. Proceed to **Step 8**.

b. To calibrate with 6 pounds press and the display will read: *Part 10*
To calibrate with 12 pounds press and the display will read: *Part 20*
To calibrate with 30 pounds press and the display will read: *Part 50*
Place the amount of weight you have selected to calibrate with on the platter and then press the key. The displays will show: *rEAd*, then *End*, and finally *SELF tEST*.

8. Remove all weight from the platter, turn the scale **OFF**, and replace *CAL Plate* if necessary. You are done.

If you encounter any problems you may want to do this procedure again or the *PC-100 Main PCB Programming* procedure and then attempt the *PC-100 Quick Calibrate* once more.

If further problems persist, please contact the Atron Systems Service Department at 973-227-8882.