


**PC-100 Programming of Units: lb or kg**

1. Make sure that the scale is plugged into a proper outlet, the platter is properly seated, there is nothing on the platter, and that the *Power Switch* is **OFF**.
2. Locate the *CAL Switch* which is under the platter on the front left side. If necessary, remove the *CAL Plate* to expose the *CAL Switch*.

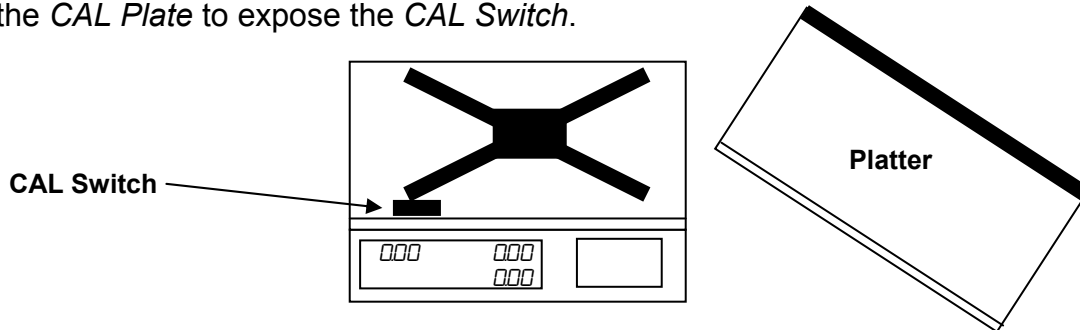

3. Press and hold down the *CAL Switch* as you place the *Power Switch* in the **ON** position.
4. The displays will read: *SPAn SEt*.
5. Press **TARE TARE** and then the display will read: *Code*.
6. Now press **C** and the displays will now read: *Code 000*.
7. Press **7 7 5 5 9** and the displays will now read: *Code 77559*.
8. Press **\* \* \*** and the displays will read: *PRrR SEt2* and the *Price Display* will have a hexadecimal number in it. You need to enter one of the entries from the table below:

Units	Price Format	Enter
lb	0.00	1 1 * * 9 2 * 0 2 *
kg	0.0000	1 0 * * 2 3 * 0 4 *
kg	0.000	1 0 * * 2 3 * 0 3 *
kg	0.00	1 0 * * 2 3 * 0 2 *
kg	0.0	1 0 * * 2 3 * 0 1 *



Now the displays will read *End* and then read *SPAn SEt*; you may have to press one more time in order for the displays to read *End* and then *SPAn SEt*.

9. Go to step 4 of ***PC-100 Quick Calibrate Instructions*** and complete those instructions using full capacity weights (60 lb or 30 kg.) If you encounter problems with the ***PC-100 Quick Calibrate Instructions***, it may be necessary to follow the ***PC-100 Span & Gain Calibration Instructions***.

If further problems persist, please contact the Atron Systems Service Department at 973-227-8882.